

View controls	
1	Select mode
2	Guidelock mode
3	Center panned map
4	Select map layers
5	Toggle map view mode
6	Zoom out / in

Guidance toolbar	
7	Task button
8	Field menu
9	Task menu
10	Guideline menu
11	Steering options menu
12	Nudge menu
13	Master switch
14	Auto steer engage/disengage

Dashboard	
15	Provides selected system status and performance information

Navigation bar					
16		Setup screen	19		ISOBUS universal terminal
17		Inventory manager	20		Auto section control
18		TAP	21		Task information
			22		System diagnostics
			23		GNSS information
			24		Guidance
			25		System information

Swipe up from base of screen to open Pop-up toolbar.



Pop-up toolbar			
1	Power	5	Screen recording
2	Tool tips	6	Decrease brightness
3	Eject USB	7	Increase brightness
4	Screenshot	8	Day & Night mode

Field menu	
	Select field
	Create new field
	Unload field
	Place flag point
	Record field boundary
	Complete field boundary recording
	Boundary recording offset
	Configure headland for task
	Clear boundary
	Create boundary from shape file
	Create boundary from coverage

Task menu	
	Select task
	Create new task
	Configure task regions
	Clear task data
Steering options menu	
	Auto steer status
	Auto steer tuning parameters
	Auto steer calibration

Guideline menu	
	Select guidance
	Cycle guidance mode
	Cycle guidance
	Create guideline
	Record AB line
	Record identical curve
	Record pivot
	Manual AB line window
	Configure headland turns

Master switch status	
	Ready to use. Select master switch.
	Engaged and active. Select master switch.
	Disengaged. Select master switch for possible causes.

Auto steer status	
	Ready to use. Press to engage auto steer.
	Engaged and active. Press to disengage to return to manual steering.
	Cannot engage. Press for steering status troubleshooting.
	Flashing icon - delayed engage mode. Long press to start auto steering when above minimum speed within 15 seconds.

Getting started

Change access level



There are pre-defined access levels in Horizon Lite. Each level has specific software capabilities. Topcon recommends the Easy Access Level for new users.

Enable/disable features and view licenses



Features in Horizon Lite can be enabled or disabled. Not all features are enabled by default. Features require a license. Licenses are available from your dealer.

Basic operation

 
1 Create a new vehicle profile



Follow the screen prompts. Enter the vehicle geometry measurements accurately.

OR

Select a vehicle profile



2 Create a new implement



Follow the screen prompts. Enter the implement geometry measurements accurately.

OR

Select an implement profile



3 Create a new field



OR

Select field



Record boundary (Optional)



Drive the vehicle around the boundary. A blue line shows the boundary.



See the Operator Manual to change the recording settings.

4 Create a new guideline

Position the vehicle at the start of the guideline. and place point A.



Drive the vehicle to the end of the guideline and place point B.



OR

Select a guideline



5 Auto steer & record coverage

Drive the vehicle close to the active guideline. Select the Auto steer button.



AND / OR

Select the Master switch button to record a coverage map of work.

